

TV BRAND	CODE	TV BRAND	CODE	TV BRAND	CODE
Admiral	058, 061, 062, 067, 107	Infinity	068	RCA	022, 027, 032, 033, 046, 053, 055, 061, 065, 072, 073, 082, 104, 149
Adventura	004, 060	Inkel	075	Realistic	012, 033, 044, 053, 057, 070, 168, 179, 192, 194
Aiko	106	Janeil	060	Rhapsody	199
Akai	044, 065	JBL	068	Runico	031, 044
Amark	007, 086	JCB	014	Sampo	031, 044, 053
Amstrad	006	JVC	048, 067, 077, 080	Samsung	007, 016, 020, 031, 033, 044, 053, 070, 074, 192
Alleron	193	Kawasho	041, 051	Samsux	053
Ambassador	191	KEC	194	Sanyo	002, 010, 028, 168, 173
Anam	088, 089, 093, 194	Kenwood	033, 044	Scimisu	033
Anam National	069	Kloss	060	Scotch	192
AOC	033, 044, 065, 199	KMC	007	Scott	031, 033, 044, 079, 192, 193, 194, 250
Audiovox	194	KTV	007, 030, 044, 053, 059, 065, 194, 199, 294	Sears	002, 007, 010, 016, 027, 028, 043, 061, 068, 069, 070, 168, 170, 173, 185, 192, 193
Belcor	033, 041	Kurazai	062	Sharp	007, 009, 023, 035, 053, 057, 107, 179
Bell & Howell	030, 062, 168	Lodgenet	062	Shogun	033
Bradford	194	Logik	030, 062	Signature	007, 030, 044, 058, 062, 067
Broksonic	011, 054	Luxman	027, 041, 051, 070	Simpson	201
Brockwood	033, 041	LXI	006, 035, 061, 067, 068, 168, 170, 192	Sony	014, 032, 038, 050, 066
Candle	027, 044, 052, 060, 070	Magnavox/	001, 005, 007, 068, 014, 026, 027, 031, 034, 014, 044, 052, 068, 081, 201	Soundesign	052, 192, 193, 194
Carnivale	044	Philips	001, 005, 007, 068, 014, 026, 027, 031, 034, 014, 044, 052, 068, 081, 201	Squareview	006, 185
Carver	068	Majestic	030, 062	SSS	033, 194
Celebrity	014	Marantz	003, 044, 065, 068, 076	Starlite	194
Centurion	044, 051	Matsushita	264	Supre-Macy	060, 071
Citizen	027, 044, 052, 053, 059, 060, 062, 070, 074, 106, 294	Megatron	086, 159, 192	Supreme	014
Clairtone	199	MEI	199	Sylvania	001, 005, 006, 026, 027, 031, 034, 044, 052, 068, 081
Concerto	041, 051, 070	Memorex	030, 062, 070, 164, 168, 192	Symphonic	004, 006, 185
Contec	020, 194, 199	MGA/	003, 027, 031, 033, 041, 044,	Tatung	019, 069
Coronado	007	Mitsubishi	051, 065, 076, 084, 107, 164, 192	Technics	065, 264
Craig	194	Midland	031, 053, 061, 065, 149	Technol Ace	193
Crown	007, 053, 194	Minutz	035	Techwood	027, 065, 070
Curtis Mathes	044, 053, 061, 062, 074, 168	Motorola	069, 107	Teknika	001, 007, 027, 030, 033, 052, 053, 062, 068, 070, 074, 079, 106, 164, 193, 194
CXC	194	MTC	033, 044, 070, 074, 199	Telerent	007, 062
Daewoo	027, 033, 039, 040, 041, 042, 051, 053, 090, 091, 092, 094, 106, 465	Multitech	194	TMK	027, 031, 070, 191, 192
Daytron	033, 041, 044, 051	NAD	170, 180, 192	Toshiba	016, 029, 043, 069, 074, 168, 170
Dumont	031, 041, 033	NEC	023, 027, 031, 033, 044, 070	Tosonic	199
Electroband	014, 199	Nikko	044, 106, 192	Totevision	053, 059
Electro Home	041, 051	Noshi	032	Universal	027, 070
Elektra	002	NTC	106	Vector Research	044
Emerson	007, 008, 011, 012, 017, 054, 033, 053, 065, 079, 168, 191, 192, 193, 194, 199, 250, 294, 296, 477	Onwa	194	Victor	067
Envision	041, 044, 051	Optimus	168, 180, 264	Vidikron	068
Fisher	010, 028, 168, 173	Oplonica	107, 179	Vidiech	027, 033, 192
Fujitsu	193	Orion	013, 017, 033, 045, 047, 078, 250	Viking	060
Funai	004, 185, 193, 194	Panasonic	018, 019, 021, 024, 053, 063, 065, 069, 264	Wards	007, 027, 030, 031, 033, 034, 035, 037, 044, 057, 058, 062, 065, 067, 068, 070, 179, 081, 192, 193
Futuretech	194	Penney	005, 010, 027, 032, 033, 035, 037, 041, 044, 051, 053, 061, 065, 069, 070, 074, 149, 170, 192	White/	
GE	005, 019, 027, 031, 035, 037, 041, 046, 051, 053, 055, 061, 065, 069, 070, 149, 192, 296, 465	Philco	001, 007, 027, 033, 034, 044, 052, 059, 065, 068, 081, 097	Westinghouse	058
Gibraltar	007, 025, 027, 031, 041, 044, 051, 059, 060, 065	Pilot	033, 041, 044, 053, 059, 097	XR-1000	062
Gibraltar	031, 033, 044	Pioneer	056, 180	Yamaha	027, 033, 044
GoldStar	007, 027, 031, 033, 041, 044, 053, 059, 060, 065, 070, 192	Portland	007, 027, 033, 053, 106	York	031, 044
Gundig	059	Prism	065	Zenith	030, 031
Grumpy	193, 194	Proscan	055, 061, 073, 082		
Hallmark	041, 051, 192	Proton	031, 192		
Harvard	194	Pulsar	031, 033, 041		
Hitachi	007, 027, 049, 051, 070, 159, 165, 083, 085	Quasar	019, 065, 069, 179, 264		
		Radio Shack	033, 041, 044, 053, 061, 070, 168, 179, 192, 194		

VCR BRAND	CODE	VCR BRAND	CODE	VCR BRAND	CODE
Admiral	014, 056, 062	JCL	008	Radio Shack	014, 051
Adventura	014, 025	Jensen	055	Radix	051
Alko	292	JVC	004, 005, 007, 022, 026, 038, 055, 060, 081	Randex	051
Alwa	014, 025	KEC	051, 292	RCA	001, 008, 016, 017, 027, 028, 037, 041, 046, 056, 074, 119, 120, 163, 216
Akai	011, 021, 051, 055, 075, 120	Kenwood	005, 007, 052, 055, 060, 081	Realistic	005, 014, 025, 030, 034, 049, 051, 060, 061, 062, 076, 118
American High	049	KLH	086	Ricoh	048
Asha	254	Kodak	049, 051	Runco	053
Audio Dynamics	007, 044	Lloyd	014, 025	Samsung	021, 028, 039, 059, 254
Audiovox	051	Lloyd's	222	Sanky	053, 062
Beaumarck	254	Logik	042, 086	Sansai	042
Bell & Howell	005, 024, 118	LXI	002, 025, 051	Sansui	055, 081
Broksonic	009, 048, 053, 064, 135, 198, 225	Magnavox	008, 025, 034, 036, 049, 053, 095, 163	Sanyo	005, 024, 030, 060, 061, 118, 254
Calix	051	Magnin	254	Scott	003, 006, 031, 042, 057, 059, 135, 198, 225, 226
Canon	008, 034, 049	Marantz	005, 008, 036, 044, 049, 060, 095	Sears	002, 005, 015, 030, 046, 049, 051, 056, 060, 061, 068, 118, 119
Capehart	034	Marta	002, 051	Sharp	014, 056, 062, 076
Carver	095	Matsushita	049, 176	Shintom	042, 086
CCE	086, 292	MEI	049	Shogun	254
Citizen	002, 006, 028, 051, 060, 292	Memorex	002, 005, 025, 030, 034, 014, 049, 051, 053, 060, 061, 062, 118, 254	Signature	014, 025, 027, 037, 062
Colortyme	044	MGA	057, 075	Singer	086
Colt	086	MGN Technology	254	Sony	032, 035, 046, 047, 048, 049, 050
Craig	028, 030, 051, 061, 086, 254	Minolta	056, 119	STS	056
Curtis Mathes	008, 013, 034, 044, 049, 055, 060, 074	Mitsubishi	023, 029, 031, 047, 057, 075, 081	Sylvania	008, 016, 014, 017, 025, 034, 036, 047, 049, 054, 057, 065, 073, 074, 095
Cybernex	254	Motorola	049, 062	Symphonic	014, 025
Daewoo	006, 010, 012, 034, 057, 058, 059, 292	MTC	014, 025, 028, 254	Tandy	005, 025
Daytron	034, 055, 058	Multitech	014, 025, 028, 042, 086	Tashiko	002
DBX	007, 044	NEC	005, 007, 044, 052, 055, 070, 071, 081, 118	Tatung	007, 055
Dynatech	014, 025	Nikko	051	Teac	007, 014, 025, 055
Electrohome	051	Nikon	048	Technics	008, 049, 176
Electrophonic	051	Noblex	254	Teknika	002, 014, 049, 051, 053
Emerex	046	Olympus	049	TMK	222, 254
Emerson	002, 003, 006, 008, 009, 014, 016, 022, 033, 040, 049, 051, 057, 064, 075, 135, 198, 222, 225, 226, 292, 493	Optimus	051, 062, 118, 176	Toshiba	006, 015, 046, 052, 057, 059, 226
Fisher	005, 015, 024, 030, 052, 061, 068, 118	Optonica	076	Totevision	002, 028, 051, 254
Fuji	047, 049	Orion	022, 049, 065, 066, 067, 068, 493	Unitech	028, 254
Funai	014, 025	Panasonic	008, 013, 034, 049, 176, 239	Vector	059
Garrard	014	Penney	005, 008, 017, 028, 034, 044, 046, 049, 051, 052, 056, 068, 254	Vector Research	031, 044, 052
GE	008, 027, 028, 034, 041, 049, 074, 216	Pentax	046, 056, 119	Video Concepts	044, 059, 075
GoldStar	002, 051, 052, 060	Philco	008, 034, 036, 049	Videosonic	254
Go Video	019, 043, 063	Phillips	008, 017, 034, 036, 049, 076, 095	Wards	002, 014, 025, 027, 028, 034, 037, 049, 056, 060, 061, 062, 074, 076, 086, 095, 163, 226, 254
Gradiente	014	Pilot	051	XR-1000	014, 042, 049, 086
Harley Davidson	014	Pioneer	045, 046, 081	Yamaha	005, 007, 044, 052
Harman/Kardon	044, 052	Portland	034, 058	Zenith	018, 035, 038, 047, 048, 053, 061
Harwood	086	Proflitronic	254		
Headquarter	060	ProScan	027, 041		
Hi-Q	061	Protoc	086		
Hitachi	025, 046, 055, 056, , 059, 119	Pulsar	053		
Instant Replay	008, 017, 034	Quarter	060		
		Quartz	005, 060		
		Quasar	013, 034, 049, 176		

RECEIVER BRAND CODE		RECEIVER BRAND CODE		RECEIVER BRAND CODE	
Denon	034, 068, 102	Philips	089	Sony	008, 020, 059, 091
Fisher	073	Pioneer	090, 058	Soundesign	048, 092, 093, 094
Goldstar(LG)	088	Radio Shack	012, 040	Zenith	048, 092, 093, 088, 094
Harman Kardon	043	Realistic	079	Teac	054, 064
JVC	053	Sanyo	044	Technics	095
Kenwood	045	Scott	055	Yamaha	030
Marantz	080	Sharp	082		
Onkyo	052	Sherwood	012, 040		

NOTE: If your digital converter is an Explorer 2100, you will need to add an additional “0” (zero) at the front of the code number when programming the VCR Commander. To program the remote, use the codes as listed here. All other digital converters models use the codes as listed for all applications.