



Jumbo Universal Remote

OPERATION MANUAL

INTRODUCTION

This Universal Remote Control can operate up to eight types of devices, including: Televisions (TV), Video Cassette Recorders (VCR), and Digital Video Disc (DVD) player, Cable and Satellite (SAT).

See the diagram on Page 2 to familiarize yourself with the features of this remote control. You may also need to review the operating manuals of your original remotes to refresh yourself on the functions of those units.

BATTERY INSTALLATION

1. Remove the cover from the battery compartment, which is located on the back of the unit.
2. Insert two "AA" size alkaline batteries (not included) according to the diagram inside the battery compartment and replace the battery compartment cover.
3. Press the ON/OFF button, the LED should illuminate, if it doesn't, reset the batteries and try again.

Requires 2 "AA" batteries (not included).



BATTERY WARNING:

- Do not mix alkaline, standard (carbon-zinc) and rechargeable batteries (Nickel Metal Hydride).
- Do not mix old and new batteries.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the item before being charged (if removable).
- Rechargeable batteries are only to be charged under adult supervision (if removable).
- Exhausted batteries should be removed immediately and must be recycled or disposed of properly according to state or local government ordinances and regulations.
- The supply terminals are not to be short-circuited.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity (see diagram).
- Do not dispose batteries in a fire - batteries may leak or explode.

LED INDICATOR

The LED INDICATOR will light up to provide feedback for various functions. When a valid key is pressed, the LED INDICATOR remains lit as long as the key is pressed and turns off when the key is released. The LED INDICATOR also blinks in Programming Mode or in Menu Mode to provide feedback.

OPERATION INSTRUCTION FOR TV ONLY

DIRECT CODE ENTRY


First find the desired brand & code in the attached Code List and follow the below procedure.

1. Press and hold the CODE SEARCH button until the red indicator stays on, then release the CODE SEARCH button.
2. Enter the 3 digit code from the code tables.
Note: after a valid code entry, the red indicator turns off. For an invalid code, the red indicator flashes.
3. With your device on, press CHANNEL UP. If the device responds, no further programming is required. Note: If some buttons do not operate your equipment, try one of the other codes for your brand.

CODE SEARCH

If your product does not respond after you have tried all the codes for your brand, or if your brand is not listed, try searching for your code by following these steps.

1. Manually turn on your device (TV, VCR, etc) to be controlled.
2. Press and hold the CODE SEARCH button until the red indicator stays on, then release the CODE SEARCH button.
3. Facing the remote control to your device, press the POWER button and release till the power on the device turns off.

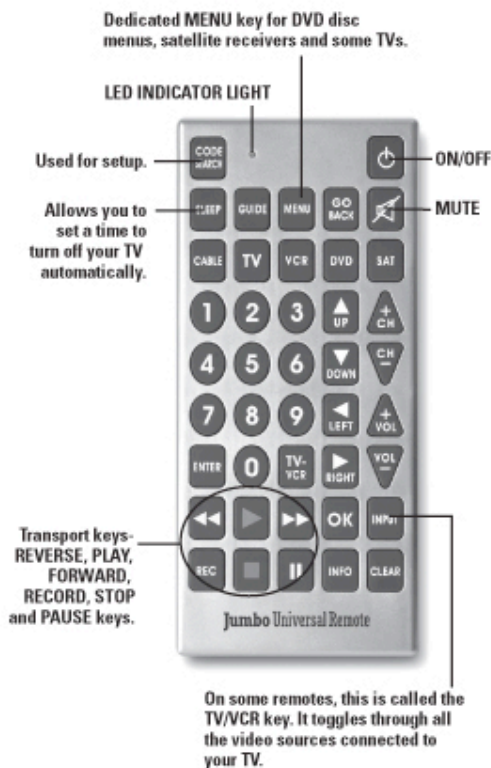

- 4.If there is no response, press the CHANNEL UP button repeatedly until the device to be controlled changes channel. If you accidentally overshoot the code required, press the CHANNEL DOWN button to backtrack through the library until the device changes channel.
- 5.Press and release MUTE to install the code.
- 6.Test other buttons such as VOL +/- & CH +/- to make sure the device works properly.

Remark : When the control is set, and no keys pressed within 12 seconds, then the model of the **CODE SEARCH** will be turned off automatically.

CODE IDENTIFICATION

Lets you check for a code for a specific brand within the Code Library for a particular manufacturer.

- 1.Press the CODE SEARCH button till the red indicator light turns on and release the CODE SEARCH.
- 2.Press and quickly release the device key (TV, VCR, etc). The red indicator blinks and remains on.
- 3.Press the CODE SEARCH button one more time, till the red indicator light stays on.
- 4.To find the first code enter the number (0-9), when the red indicator flashed then it shows that this is the first code. Repeat the process till you find the second code, and repeat the process till you find the third code.

Remark : When the control is set, and no keys pressed within 12 seconds, then the model of the **CODE SEARCH** will be turned off automatically.

DIRECT CODE ENTRY

- 1.Press and hold the CODE SEARCH button until the red indicator stays on, then release the CODE SEARCH button.
- 2.Press and release the desired mode button (TV, VCR, etc.). The red indicator blinks, then stays lit.
- 3.Enter the 3 digit code from the code tables (on separate sheet). Note: after a valid code entry, the indicator flashes.
- 4.With your device on, press CHANNEL UP. If the device responds, no further programming is required. Note: if some buttons do not operate your equipment, try one of the other codes for your brand.

CODE SEARCH SETTING

If your product does not respond after you have tried all the codes for your brand, or if your brand is not listed, try searching for your code by following these steps.

1. Manually turn on the device (TV, VCR, etc.) to be controlled.
2. Press and hold the CODE SEARCH button until the red indicator stays on, then release the CODE SEARCH button.
3. Press and quickly release the desired mode button (TV, VCR, etc.). The red indicator blinks off once.
4. Face the remote control directly to the device you want to control (TV, VCR, etc).
5. Press the ON/OFF button.
6. The red led indicator will keep on lighting till your device (TV, VCR, etc) turns off.
7. Press and release enter to install the code.
8. If your device does not turn off, Please return to point 5 again, till your device turns off. Maybe it need returns some times.

Most users will store VCR codes under the VCR button, Cable codes under CABLE, etc. If (for example) you want to store a VCR code under CABLE, first follow the procedure for Direct Code Entry (previous page) and press CABLE in step 2 of Direct Code Entry, then enter ANY VCR code in step 3 of Direct Code Entry, then follow the steps above for Code Search (or Brand Search, below). Note: If the device does not have a CHANNEL UP button, use PLAY (VCR only) or POWER instead, Code Search starts from the currently stored three digit number under that mode.

CODE RETRIEVAL

1. Manually turn on the device (TV, VCR, etc) to be controlled.
2. Press and hold the CODE SEARCH button until the red indicator stays on, then release the CODE SEARCH.
3. Press the device control (TV, VCR, etc) you want to control.
4. Press the CODE SEARCH button again and the red indicator should blink once.
5. Follow the sequence of (0) (9) and press once for each number button until the indicator flashes one time.
6. Repeat the procedure 5 till 3 correct codes are confirmed.
7. If the red indicator light flashes, than you have entered an incorrect number, and please follow the sequence (0) (9).

USING THE REMOTE TO CONTROL YOUR COMPONENTS

Because this remote controls more than one component, you must first “tell” the remote which component you wish to operate. That means, if you wish to operate your TV, you must first press the TV key to put the remote in the TV Mode. The remote stays in the chosen component mode (such as TV Mode) until you change it. If your remote is in TV Mode, you must change to mode in order to operate your DVD or VCR, satellite receiver or cable box. For example, if you are in VCR Mode, and you wish to turn off your TV, you must press the TV key first before pressing the ON/OFF key.

ON-SCREEN MENUS

Accessing and Selecting Menu Items

Today’s advanced components use on-screen menus to help you navigate through all their features and functions. While this remote cannot access every menu system of every component mode, it does offer some menu functionality.

To use a component’s on-screen menu system, you first have to put the remote in Menu Mode.

1. Make sure your components are turned on and your TV is set to the component’s input. (Use the **INPUT** key to toggle through video sources when in TV mode.)
2. Press the component key whose menu you want to access.
3. Press the **MENU** key, The **LED INDICATOR** blinks, indicating you are in the Menu Mode.
4. Use the **VOL +/-** and/or **CH +/-** keys to navigate through the on-screen menu system.
5. To make a selection from the on-screen menu, press the **MENU OK INFO ENTER** key to select the highlighted item.

TIP : If the remote doesn’t respond, check to see that the **LED INDICATOR** is still blinking. Note: it times out after 20 seconds. If this happens, just press the **MENU** key again, and then retry your selection.

Exiting a Menu Mode

The remote automatically times out of Menu Mode after 12-seconds of inactivity (no keys being pressed). At that time, the remote clears the displayed menu from the TV. If you want to exit the Menu Mode yourself, press the corresponding component key on the remote (**TV, DVD•VCR, SAT•CBL**). The **LED INDICATOR** turns off.

SLEEP TIMER (SELECT MODELS ONLY)

This feature automatically turns off your TV at a duration you choose from 1 to 99 minutes. The Sleep Timer only works if you have found a code that controls your TV. The timing mechanism for the Sleep Timer is built into your universal remote control. To program the Sleep Timer, follow these steps.

Programming the Sleep Timer

1. Press and release the TV key.
2. Press and hold the SLEEP key for three seconds. The LED INDICATOR turns on.
3. Release the SLEEP key.
4. Using the number keys, enter the desired time in minutes (from 1-99 minutes). To set the timer to a number under 10 minutes, first press 0 and then the desired number (e.g. 05 for five minutes). The LED INDICATOR blinks with each keypress.
5. Once the second number is entered, the LED INDICATOR turns off.

TIP: Any keypress other than the number keys is ignored. If you don't enter the sleep time within 10 seconds after pressing the **SLEEP** key, you must start over at step 1. The LED blinks four times and then turns off, indicating your attempt to program the Sleep Timer has been unsuccessful.

6. The Sleep Timer is now set.
7. Leave remote aimed at the TV. Once the Sleep Timer is set, you can continue to use the remote without affecting the Sleep Timer. However, because the timing mechanism for the Sleep Timer is built into the remote itself, the remote must be in TV Mode and pointed at the TV to activate the Sleep Timer.

Canceling the Sleep Timer

The Sleep Timer program will be cancelled and reset to zero by pressing and releasing the SLEEP key and pressing & releasing the ON/OFF key. The light indicator will flash indicating the Timer has been reset to zero.

TV CODES

ABEX	172
ADMIRAL	001, 173, 211
ADVENTURA	174
AIKO	016, 220
AKAI	002
ALLERON	046
AMTRON	038
ANAM NATIONAL	003, 038, 192, 193, 194
AOC	004, 005, 006, 007, 195, 196
AUDIOVOX	038
BELCOR	004
BELL & HOWELL	001, 083, 162
BRADFORD	038
BROKWOOD	004
CANDLE	004, 006, 008, 174, 196
CENLEBRITY	002
CITIZEN	004, 006, 008, 016, 038 105, 171, 174, 177, 196
COLORTYME	004, 006, 010, 196, 200
CONCERTO	004, 006, 196
CONTEC/CONY	012, 013, 038, 221
CRAIG	038
CROWN	038, 171
CURTIS MATHES	000, 004, 006, 015, 105 162, 171, 196, 212
CXC	038
DAEWOO	004, 005, 006, 016, 017 127, 171, 190, 196, 202 222
DAYTRON	004, 006, 171, 196
DIMENSIA	000
DUMONT	004, 151
ELECTROBAND	002
ELECTROHOME	003, 004, 006, 019, 020 022, 196
EMERSON	004, 006, 012, 023, 024 025, 026, 027, 028, 029 030, 031, 032, 033, 034 035, 036, 037, 038, 039 041, 042, 043, 044, 046 047, 123, 124, 162, 171 177, 179, 191, 196, 208 221
ENVISION	004, 006, 196
FISHER	048, 049, 051, 162, 180
FUJITSU	046
FUNAI	038, 046, 223
FUTURETEC	038
GE	000, 003, 004, 006, 022 052, 054, 055, 087, 164 165, 166, 167, 168, 181 196, 213

GIBRALTER	004, 151
GOLDSTAR	004, 005, 006, 012, 019 056, 057, 058, 155, 156 171, 172, 196
GRUNDY	038, 046, 171
HALLMARK	004, 006, 196
HARVARD	038
HITACHI	004, 006, 012, 013, 059 060, 061, 135, 136, 137 138, 139, 140, 141, 142 143, 144, 145, 146, 148 150, 179, 196, 198, 199 224
IMA	038
INFINITY	062
JANEIL	174
JBL	062
JCB	002
JC PENNY	000, 004, 005, 006, 008 022, 052, 054, 058, 063 064, 072, 087, 105, 171 172, 181, 196, 201, 207 232
JENSEN	004, 006, 196
JVC	012, 013, 054, 060, 065 066, 067, 123, 157, 158 159, 182, 225
KAWASHO	002, 004, 006, 196
KENWOOD	004, 006, 019, 196
KLOSS NOVABEAM	068, 069, 174, 183
KTV	038, 070, 171, 177
LOEWE	062
LOGIK	083
LUXMAN	004, 006, 196
LXI	000, 006, 049, 062, 071 072, 073, 162, 181, 196 207, 232
MAGNAVOX	004, 006, 008, 019, 062 068, 069, 075, 076, 077 088, 130, 131, 132, 133 134, 183, 196, 219, 234 235
MAJESTIC	083
MARANTZ	004, 006, 062, 078, 196
MEGATRON	006, 059, 196, 224
MEMOREX	001, 006, 082, 083, 162 196
MGA	004, 005, 006, 019, 022 051, 079, 080, 082, 196
MIDLAND	054, 151, 171, 172, 181
MINUTZ	052

TV CODES (cont.)

MITSUBISHI	004, 005, 006, 019, 022 051, 079, 080, 081, 082 125, 196, 226
MONTGOMERY WARD	083
MOTOROLA	003, 173
MTC	004, 005, 006, 105, 196
MULTITECH	038
MULTIVISION	084
NAD	006, 071, 072, 185, 196 207, 232
NEC	003, 004, 005, 006, 089 196, 200
NIKKO	006, 016, 196
NTC	016
ONWA	038
OPTIMUS	185
OPTONICA	095, 173
ORION	035, 191, 208
PANASONIC	003, 054, 062, 170, 214 227
PHILCO	003, 004, 005, 006, 008 012, 019, 062, 068, 069 075, 077, 183, 196
PHILIPS	003, 004, 008, 012, 019 062, 068, 069, 075, 076 086, 087, 088
PILOT	004, 171
PIONEER	004, 006, 090, 091, 092 179, 185, 196, 228
PORTLAND	004, 005, 006, 016, 171 196
PRICE CLUB	105
PRISM	054
PROSCAN	000, 181
PROTON	004, 006, 012, 093, 196 229, 230
PULSAR	004, 151
QUASAR	003, 054, 070, 214
RADIO SHACK	000, 004, 006, 012, 038 049, 095, 162, 171, 196
REALISTIC	000, 004, 006, 012, 038 049, 095, 162, 171, 196
RCA	000, 003, 004, 005, 006 007, 019, 096, 098, 099 100, 101, 102, 103, 129 179, 181, 188, 190, 196 202, 203, 215, 233
RUNCO	151
SAMPO	004, 006, 171, 172, 196
SAMSUNG	004, 005, 006, 012, 015 017, 019, 104, 105, 106 171, 172, 196, 201, 204
SANSUI	191, 208

SANYO	004, 048, 049, 080, 107 162, 169, 180
SCOTCH	006, 196
SCOTT	004, 006, 012, 024, 035 038, 046, 196
SEARS	000, 004, 006, 013, 019 046, 048, 049, 051, 066 071, 072, 109, 110, 162 180, 181, 189, 196, 207 232
SHARP	004, 006, 012, 029, 095 111, 112, 113, 122, 171 173, 196
SHOGUN	004
SIGNATURE	001, 083
SIMPSON	008
SONY	002, 205, 216, 218, 231
SOUNDESIGN	004, 006, 008, 038, 046 196
SQUAREVIEW	189
SSS	004, 038
STARLITE	038
SUPRE-MACY	174
SUPREME	002
SYLVANIA	004, 006, 008, 019, 062 068, 069, 075, 076, 077 088, 116, 161, 183, 196
SYMPHONIC	033, 038, 189
TANDY	173
TATUNG	003
TECHNICS	054
TECHWOOD	004, 006, 054, 196
TEKNIKA	004, 005, 006, 008, 012 013, 016, 038, 046, 076 082, 083, 105, 170, 171 214, 227
TELECATION	117
TERA	004, 012, 093, 229
TMK	004, 006, 196
TOSHIBA	049, 071, 072, 105, 109 117, 118, 160, 162, 201 207, 232
TOTEVISION	171
UNIVERSAL	052, 087
VICTOR	066, 182
VIDTECH	004, 005, 006, 196
VIKING	174
WARDS	000, 001, 004, 005, 006 019, 024, 033, 046, 052 062, 068, 069, 075, 076 083, 087, 088, 095, 119 120, 196

TV CODES (cont.)

YAMAHA	004, 005, 006, 019, 196
ZENITH	004, 051, 083, 152, 153 154, 210, 217

VCR CODES

ADMIRAL	001
ADVENTURA	026
AIKO	027
AIWA	026
AKAI	003, 005, 007, 008, 111 112, 113
AMERICAN HIGH	021
ASHA	013
AUDIO DYNAMICS	009, 010
AUDIOVOX	014
BELL & HOWELL	011
BEAUMARK	013
BROKSONIC	012, 025, 031
CALIX	014
CANDLE	013, 014, 015, 016, 017 018, 019
CANNON	021, 022
CAPEHART	020, 110
CARVER	062
CCE	027, 061
CITIZEN	013, 014, 015, 016, 017 018, 019, 027
COLORTYME	009
COLT	061
CRAIG	013, 014, 023, 061
CURTIS-MATHES	000, 009, 013, 016, 018 021, 022, 024, 115
CYBERNEX	013
DAEWOO	015, 017, 019, 025, 026 027, 028, 110
DAYTRON	110
DBX	009, 010
DIMENSIA	000
DYNATECH	026
ELECTROHOME	014, 029
ELECTROPHONIC	014
EMERSON	012, 014, 015, 021, 024 025, 026, 029, 030, 031 032, 033, 034, 036, 037 038, 039, 040, 041, 042 044, 045, 046, 047, 065 105, 113, 116, 117, 130
FISHER	011, 023, 048, 049, 050 051, 052, 118
FUJI	021, 119

FUNAI	026
GARRARD	026
GE	000, 013, 021, 022, 053 115, 120
GOLDSTAR	009, 014, 018, 054
GRADIENTE	026
HARLEY DAVIDSON	026
HARMAN KARDON	009
HARWOOD	061
HEADQUARTER	011
HITACHI	055, 056, 057, 107, 111 120,
HI-Q	023
INSTANT REPLAY	021
JCL	021
JC PENNEY	009, 010, 011, 013, 014 021, 022, 060, 107, 118
JENSEN	055, 056, 111
JVC	009, 010, 011, 018, 111 123
KENWOOD	009, 010, 011, 016, 018 111, 123
KLH	061
KODAK	014, 021
LLOYD	026
LOGIK	061
LXI	014
MAGNAVOX	021, 022, 062, 063, 104 108, 124
MAGNIN	013
MARANTZ	009, 010, 011, 016, 018 021, 022, 062, 064
MARTA	014
MASUSHITA	021
MEI	021
MEMOREX	001, 011, 013, 014, 021 022, 023, 026, 104
MGA	029, 065, 113
MGN TECHNOLOGY	013
MIDLAND	053
MINOLTA	055, 056, 107
mitsubishi	029, 055, 056, 065, 066 067, 068, 069, 070, 071 072, 073, 074, 106, 113 123
MONTGOMERY WARD	001, 075
MOTOROLA	001, 021
MTC	013, 026
MULTITECH	013, 016, 026, 053, 061
NEC	009, 010, 011, 018, 064 076, 078, 079, 111, 123
NIKKO	014

VCR CODE LIST (cont.)

NOBLEX	013
OLYMPUS	021
OPTIMUS	001, 014
OPTONICA	096
ORION	031
PANASONIC	021, 022, 109, 125, 126 127
PENTAX	016, 055, 056, 107, 120
PENTEX RESEARCH	018
PHILCO	021, 022, 062, 063
PHILIPS	021, 022, 062, 096, 124
PILOT	014
PIONEER	010, 055, 080, 081, 123
PORTLAND	016, 017, 019, 110
PROSCAN	000
PROTEC	061
PULSAR	104
QUARTER	011
QUARTZ	011
QUASAR	021, 022, 125
RCA	000, 003, 013, 021, 022 055, 056, 082, 083, 084 085, 086, 087, 088, 089 090, 091, 107, 115, 120 125
RADIOSHACK	001, 011, 013, 014, 021 022, 023, 026, 029, 049 050, 096
RADIX	014
RANDEX	014
REALISTIC	001, 011, 013, 014, 021 022, 023, 026, 029, 049 050, 096
RICOH	128
RUNCO	104
SAMSUNG	013, 015, 033, 053, 055 112
SANKY	001, 104
SANSUI	010, 092, 111, 123
SANYO	011, 013, 023
SCOTT	012, 015, 025, 032, 038 065, 116
SEARS	011, 014, 021, 023, 028 048, 049, 050, 051, 055 056, 107, 118
SHARP	001, 017, 029, 094, 095 096, 097
SHINTOM	056, 061, 098
SHOGUN	013
SIGNATURE	001
SINGER	021, 061, 128
SONY	098, 099, 119

STS	021, 107
SYLVANIA	021, 022, 026, 062, 063 065, 124
SYMPHONIC	026
TANDY	011
TASHIKO	014
TATUNG	111
TEAC	026, 085, 111
TECHNICS	021, 109
TEKNIKA	014, 021, 022, 026, 100 129
TMK	013, 024, 047
TOSHIBA	015, 049, 051, 055, 065 116
TOTEVISION	013, 014
UNITECH	013
VECTOR RESEARCH	009, 010, 015, 016
VICTOR	010
VIDEO CONCEPTS	009, 010, 015, 016, 113
VIDEOSONIC	013
WARDS	001, 013, 014, 015, 021 022, 023, 026, 029, 055 056, 061, 096, 101, 102 103, 107, 116
XR-1000	021, 026, 061
YAMAHA	009, 010, 111, 018, 111
ZENITH	098, 104, 119, 128

DVD CODES

JVC	161
MAGNAVOX	162
MITSUBISHI	163
PHILIPS	162
PIONEER	165
PROSCAN	160
SONY	166
RCA	160
TOSHIBA	167

SATELLITE CODES

ALPHASTAR	079
ECHOSPHERE (DISH NET)	078
ECHOSTAR (DISH SYSTEM)	089
GE	071, 080, 081
HITACHI SYS I	084
HITACHI SYS II	083

SATELLITE CODES (cont.)

HUGHES	077, 090
MAGNAVOX	085
JVC	082
PANASONIC	075
PHILIPS	085
PRIMESTAR	076
PROSCAN	071, 080, 081
RCA	071, 080, 081
SONY	072
TCE	071
TOSHIBA	073
UNIDEN	086

CABLE BOX CODES

ABC	001, 002, 003, 004, 005 006, 007
ANTRONIX	008, 009
ARCHER	008, 009, 010, 011
CABLETENNA	008
CABLEVIEW	008
CENTURY	011
CITIZEN	011
COLOUR VOICE	012, 013
COMTRONICS	015
CONTEC	016
EASTERN	017
GARRARD	011
GC ELECTRONICS	009
GEMINI	018, 019
GENERAL INSTRUMENT	003
HAMLIN	020, 021, 022, 035
HITACHI	003
JASCO	011
JERROLD	001, 003, 005, 007, 018 023, 024, 046
MAGNAVOX	025
MOVIE TIME	027, 028
NSC	027, 028
OAK	016, 029
PANASONIC	000, 048
PHILIPS	011, 012, 013, 019, 025 030, 031, 032
PIONEER	033, 034
RCA	000, 047, 049
REALISTIC	009
REGAL	022, 035
REGENCY	017
REMBRANDT	003

SAMSUNG	034
SCIENTIFIC ATLANTA	006, 036, 037, 038
SIGNAL	018
SIGNATURE	003
SPRUCER	000
STANDARD COMPONENTS	039
STARCOM	001, 007, 018
STARGATE	018
STARQUEST	018
TOCOM	004, 023
TUSA	018
TV86	027
UNIKA	008, 009, 011
UNITED CABLE	001
UNIVERSAL	008, 009, 010, 011
VIDEOWAY	044
VIEWSTAR	015, 016, 025, 027
ZENITH	050, 051

FOR EASY REFERENCE, RECORD YOUR 3-DIGIT CODES HERE

TV _____

VCR _____

DVD _____

SATELLITE _____

CABLE _____



Visit Us On The Web! www.cyi.net
Manufactured by Can You Imagine
Chatsworth, CA 91311
Made in China

KEEP THIS INSTRUCTION MANUAL AS IT CONTAINS IMPORTANT INFORMATION.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

©2007 Can You Imagine All rights reserved.

The artwork and design of this package are protected by US copyright law and may not be reproduced, distributed, displayed, published or used for any purpose without prior written permission. It is not permitted to alter, remove or reproduce any trademarks or copyright notice from this package.